


CAY BED FULL/TWIN WITH TRUNDLE

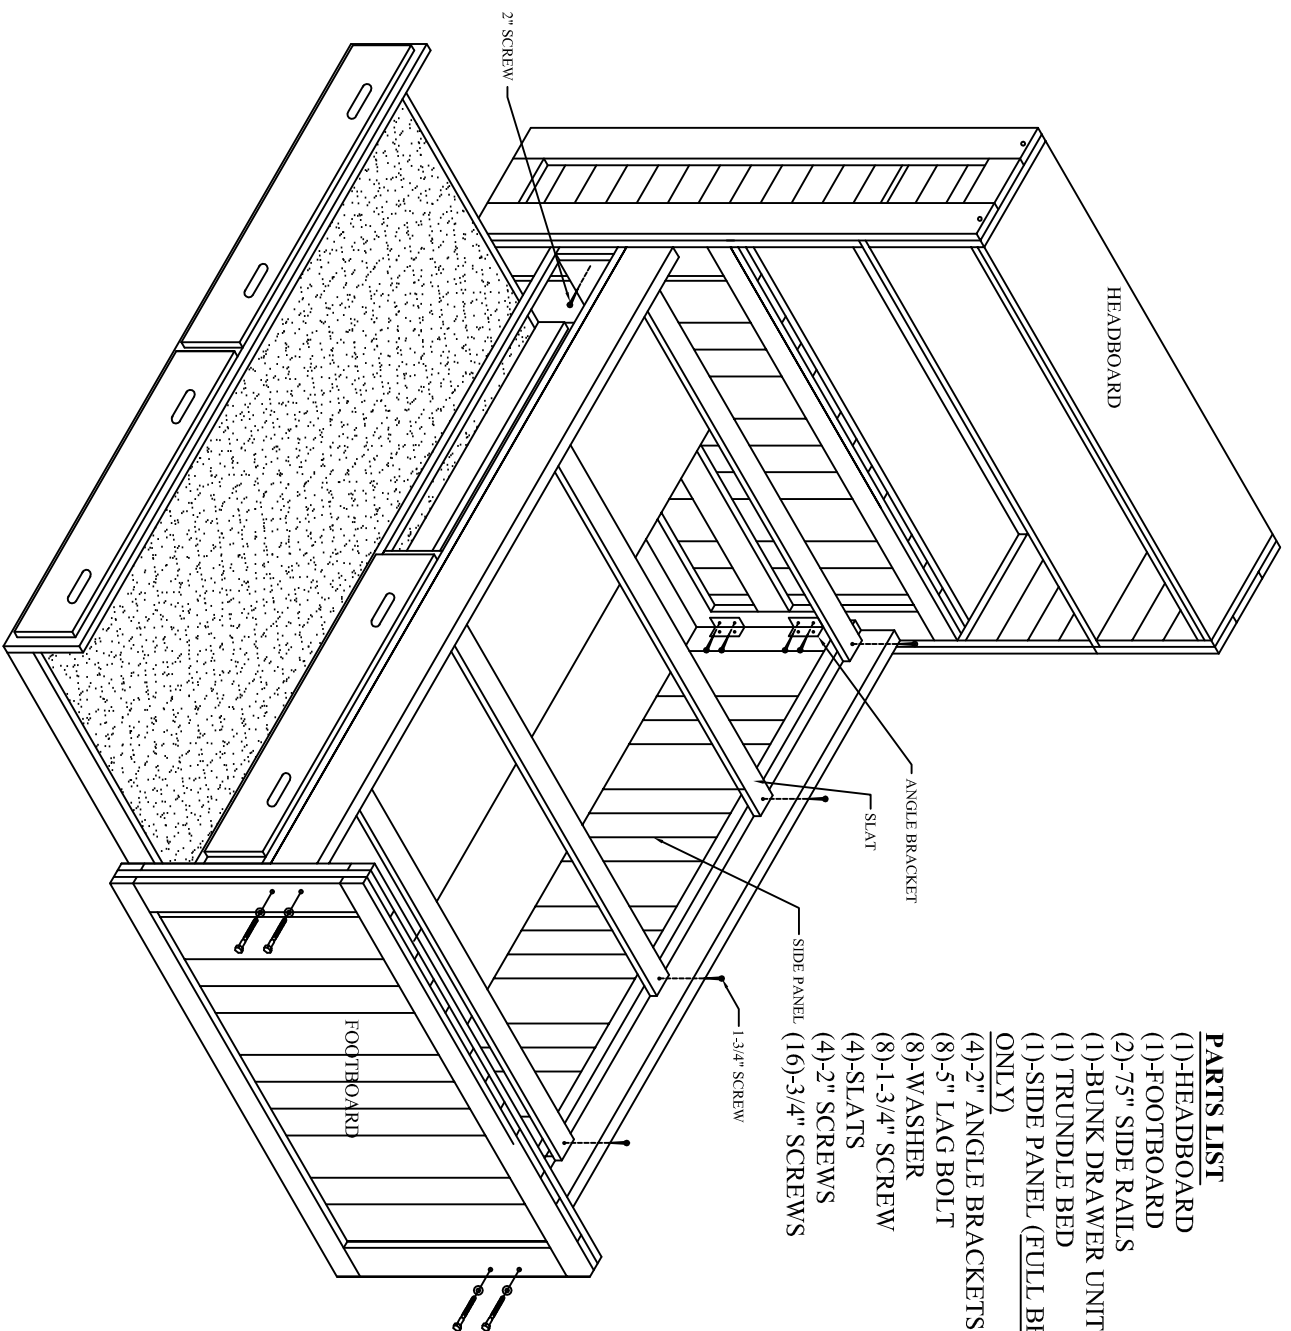

PARTS LIST

- (1)-HEADBOARD
- (1)-FOOTBOARD
- (2)-75" SIDE RAILS
- (1)-BUNK DRAWER UNIT
- (1) TRUNDLE BED
- (1)-SIDE PANEL (FULL BED ONLY)
- (4)-2" ANGLE BRACKETS
- (8)-5" LAG BOLT
- (8)-WASHER
- (8)-1-3/4" SCREW
- (4)-SLATS
- (4)-2" SCREWS
- (16)-3/4" SCREWS

ASSEMBLY INSTRUCTIONS

1. ASSEMBLE HEADBOARD, FOOTBOARD AND SIDE RAILS USING 5" LAG BOLTS AND WASHERS SUPPLIED IN HARDWARE BAG.
2. FOR FULL BED ONLY - TWIN DOES NOT GET SIDE PANEL. ATTACH SIDE PANEL TO HEADBOARD AND FOOTBOARD ON OPPOSITE SIDE OF BUNK DRAWER UNIT ASSEMBLY USING (4) ANGLE BRACKETS AND 3/4" SCREWS. ALIGN PANEL FACE WITH FACE OF SIDE RAIL FOR FLUSH FIT.
3. TWO PEOPLE ARE REQUIRED TO MOUNT BUNK DRAWER UNIT. REMOVE DRAWERS FROM UNIT AND PLACE IT UNDER THE SIDE RAIL WHERE IT IS TO BE MOUNTED.
4. LIFT THE UNIT UP TILL IT TOUCHES THE BOTTOM OF THE SIDE RAIL. USE (2) 2" LONG SCREWS IN EACH END AND SCREW THROUGH THE END PANEL AND IN TO THE HEADBOARD AND FOOT BOARD TO SECURE THE UNIT TO THE BED. REPLACE THE DRAWERS IN THE UNIT.
5. ATTACH (4) WHEELS TO BOTTOM SIDE OF TRUNDLE AND SLIDE UNDER THE BED.
4. ATTACH (4) SLATS TO SIDE RAIL CLEATS AS SHOWN USING 1-3/4" SCREWS.

THIS END UP FURNITURE CO.
 P.O. Box 5410 Sanford, North Carolina 27331
 (800) 605-2130 (919) 774-7474 Fax (919) 774-7430 www.thisendup.com