

Platform Bed Full/Queen

Instructions for Platform Bed


1. Set headboard (A) upright on floor and attach both side rails (C) to it using (4) 5" lag bolts (H) and (4) washers (J). Do not tighten bolts completely.
2. Slide (4) washers (J) over (4) 4" lag bolts (I) and attach foot rail (B) to side rails. Do not tighten bolts completely.
3. Place a side panel (D) face down on each side of assembled platform to help locate slats in next step. Line one end of the side panel up with the front side of the headboard. See diagram.
4. Lay (3) slats (F) inside of side rails with ends lined up with the (3) 3-1/2" x 1-1/2" uprights on inside of base side panel. The slats will rest on top of these uprights after assembly.
5. With the bottoms of slats flush with the bottoms of side rails, attach (6) brackets (L) to (3) slats and then to side rails using (24) 1-1/4" screws (M).
6. Now tighten all (8) lag bolts.
7. Turn platform up on its side.
8. To assemble base, turn one base side panel on its edge and attach one base end panel (E) using (4) 1-1/4" screws. Repeat this process for each corner where the base panels join.
9. Lay platform down across base so that the headboard overhangs the base assembly. The face of the headboard should be flush with outside edge of base end panel.
10. Center platform on base so that the side rails overhang the platform evenly on both sides. Attach the platform to the base assembly using (6) 2-1/2" screws (N) inserted into holes provided in slats. Holes should line up with top of the (3) 3-1/2" x 1-1/2" uprights as shown in diagram.
11. Lay in (2) bed boards side by side on top of slats then place mattress on top of boards.

Parts list

- A. Headboard (1)
- B. Footboard (1)
- C. Side rail (2)
- D. Base Side Panel (2)
- E. Base End Panel (2)
- F. Slat (3)
- G. Platform headboard (2)
(not shown)

Hardware

- H. 5" lag bolt (4)
- I. 4" lag bolt (4)
- J. washer (8)
- L. bracket (6)
- M. 1-1/4" screw (40)
- N. 2-1/2" screw (6)

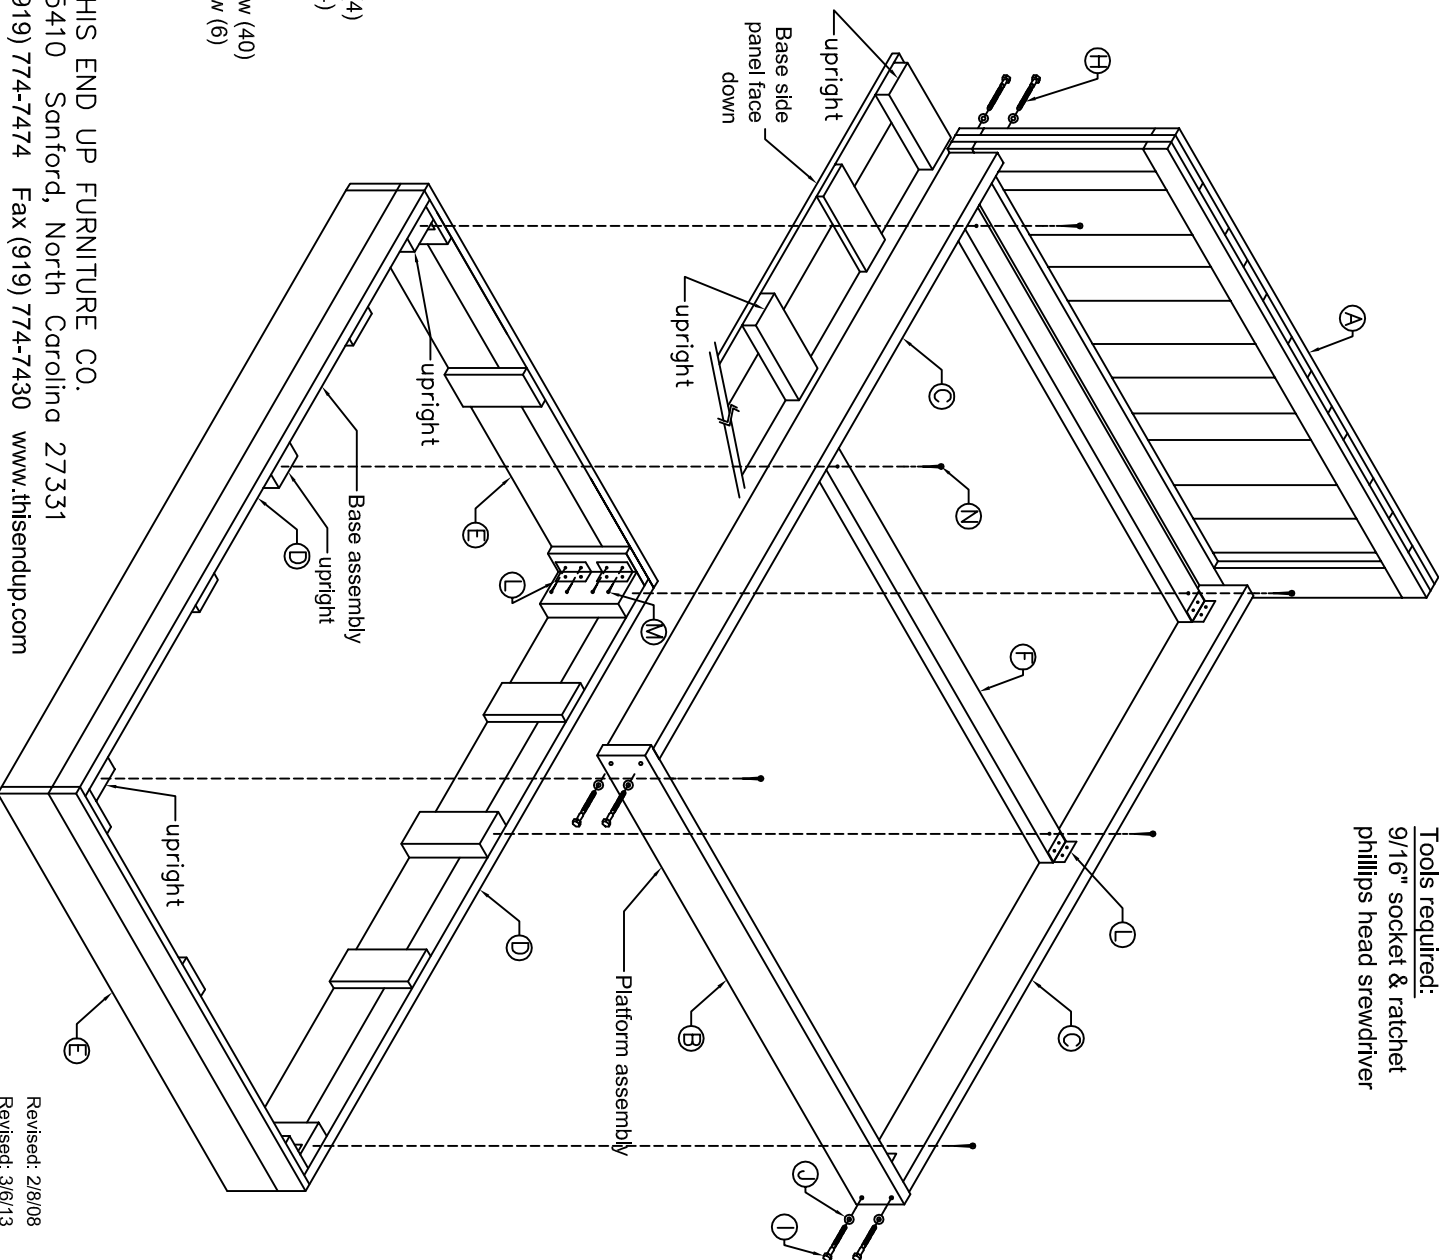

Tools required:
9/16" socket & ratchet
Phillips head screwdriver

THIS END UP FURNITURE CO.
P.O. Box 5410 Sanford, North Carolina 27331
(800) 605-2130 (919) 774-7474 Fax (919) 774-7430 www.thisendup.com

Revised: 2/8/08
Revised: 3/6/13